

Aspire NTCPU Software Upgrade Procedure 991093-5 Revision 1.1

Revision History

Revision 1.0: First Release

Revision 1.1: 6th April 2004 – Change duration of pressing the Load button to 10 seconds.

Include other Aspire Documents Available.

To build the flash card for upgrading the NTCPU.

1. Insert the blank flash card into a socket on your PC.
2. Copy the contents of the folder 'Aspire NTCPU Software Vx.xx' to the flash card, use My Computer or Explorer to copy the files.(Do not copy the folder, just the contents of the folder).
3. Stop the socket on your PC and remove the flash card.

How to upgrade the software on the Aspire NTCPU card.

To save customer data prior to updating, a blank flash card is required. Insert the card into the NTCPU and, using Program 90-03, save the software to the flash card. (Program 90-04 is used to reload the customer data if necessary.) Note that a flash card can only hold one customer database. Each database to be saved will require its own separate card.

1. Insert the PC-ATA card containing the software upgrade into the PCMCIA card slot on the NTCPU.
2. Power off the main cabinet PSU. Push and release the switch on the PSU.
3. Push in and hold the Load button SW1 on the NTCPU.
4. Power on the main cabinet PSU. Push and release the switch on the PSU.
5. Continue holding the Load button for approximately 10 seconds.
6. Release the Load button.
7. Wait until all the Status LED's on the NTCPU starts flashing (approximately 2 minutes), then remove the PC-ATA card.
8. Power off the system. Push and release the switch on the PSU.
9. Wait for the system to power down.
10. Power on the system. Push and release the switch on the PSU.
11. When the system has completed reloading the software, the Status LED will begin flashing on the NTCPU.

Refer to the Aspire Hardware Manual Section 2, NTCPU Installation for further information.

To check the version of NTCPU software on the Aspire.

1. At any display keytelephone press CHECK and then HOLD.
2. The top row on the display will show the version.

Aspire NTCPU Software Upgrade Procedure 991093-5 Revision 1.1

Aspire Documents Available.

All documents are available on the Aspire Technical CD (991098-5) and the Aspire ftp site (<http://workgroup.xdrive.com>).

Code	Title	Current Revision
991020-5	System Telephone Quick Reference Guide	Rev 1.0
991021-5	Basic Telephone Quick Reference Guide	Rev 1.0
991022-5	Single Line Telephone Quick Reference Guide	Rev 1.0
991023-5	Aspire Hardware Manual	Rev 1.1
991024-5	Aspire Features Manual	Rev 1.0
991025-5	Message Manager Installer Manual	Rev 1.1
991026-5	Aspire Message Manager User Guide	Rev 1.0
991078-5	DXE to Aspire Conversion List	Rev 1.0
991079-5	Message Manager System Manager Guide	Rev 1.0
991080-5	Aspire IP Manual	Rev 1.2
991081-5	Aspire DECT Manual	Rev 1.2
991082-5	AspireNet Manual	Rev 1.2
991083-5	Aspire CTI Manual	Rev 1.0
991084-5	Aspire MyPhone Manual	Rev 1.3
991092-5	PCPro/WebPro Installation Manual	Rev 1.2
991093-5	Aspire Upgrade Procedure	Rev 1.1
991104-5	Aspire MySystem Manual	Rev 1.0